

## **Three Position Switches**

They are next to time switches.

Up is timed/remote/auto.

Mid position is off.

Down is continuously on.

Note: SFT125 replaces SF119F but if replacing terminal, connections need to be reversed.